


56" Ceiling Fan

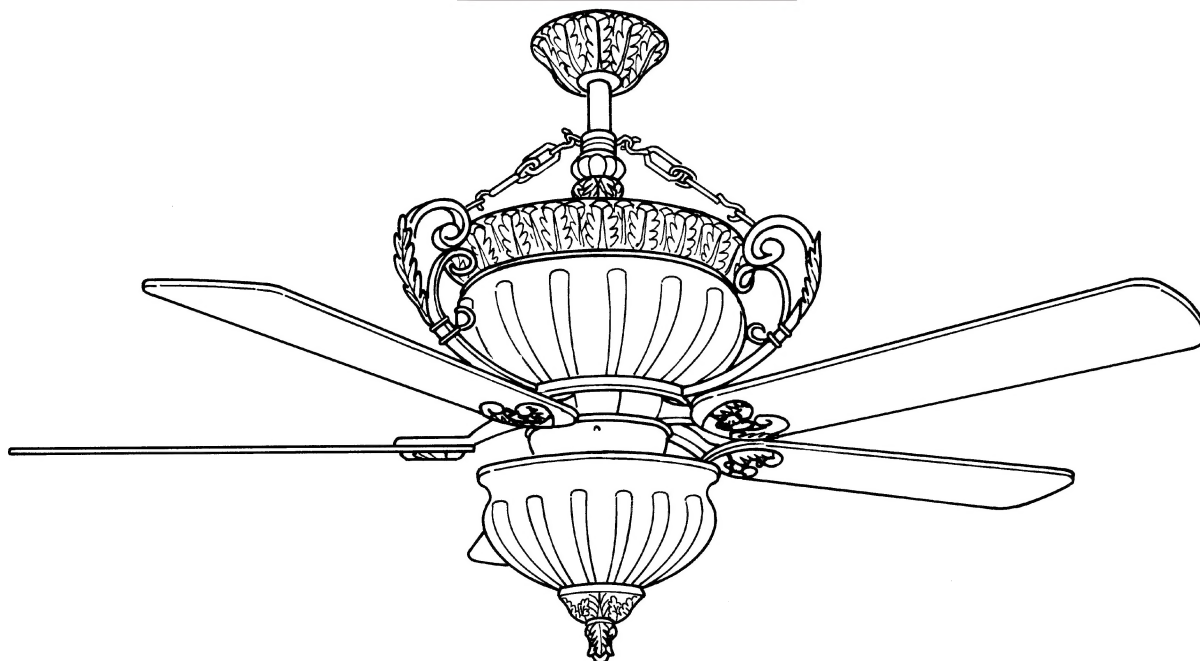

CORDOVA FAN
MODEL CF-29270



**To Begin**

Weight: 43.76 Lbs

Check to make sure you have the following:


Required

Helpful

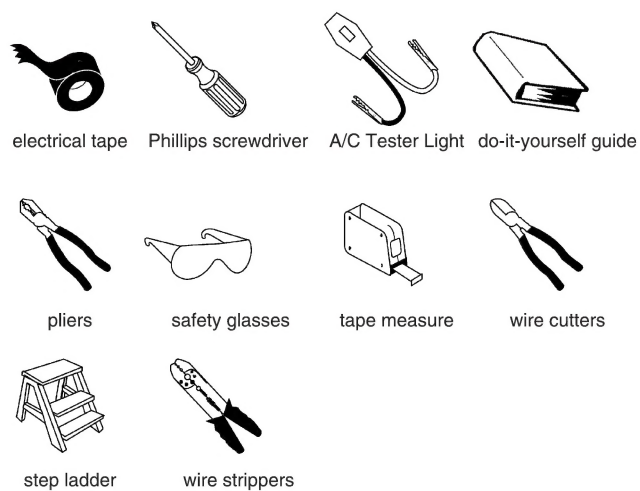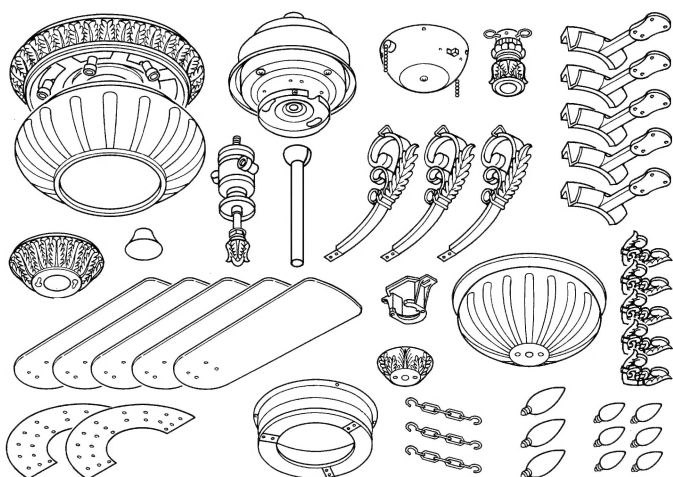


Preparation


- ⚠ Important:** When using an existing outlet box be sure the box is securely attached to the building structure and can support the full weight of the fan.
Failure to do so can result in serious injury or death.

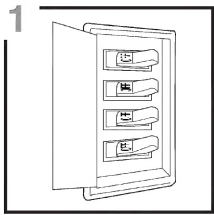

1 Turn off circuit breakers and wall switch to the fan supply line leads.

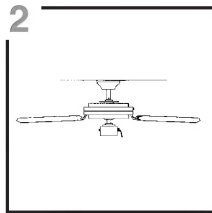


2 Downrod Mounting

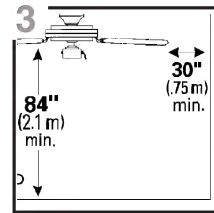

3 Check to make sure blades are at least 30 inches from any obstruction. Check downrod length to ensure blades are at least 84" (7 feet) above the floor.

- ⚠ Warning:** Failure to disconnect power supply prior to installation may result in serious injury or death.

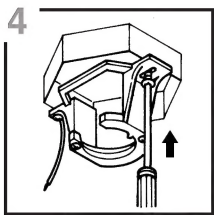


4 Secure mounting bracket to electrical box.

Important: If using the angle mount, make sure open end of mounting bracket is installed facing the roof.


⚠ Downrod Fan Mounting

Helpful Hint: Downrod style mounting is best suited for ceilings 8 feet high or higher. For taller ceilings you may want to use an extension rod (not included).


Angle style mounting is best suited for angled or vaulted ceilings. A longer extension rod will be needed to ensure proper blade clearance.

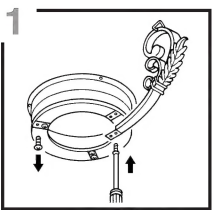


1 Install the decorative bars on the bottom level of the motor housing with screws.

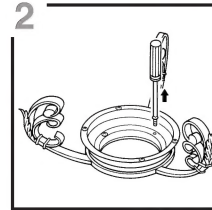


2 Upside down the housing. Remove the screws on top of it.

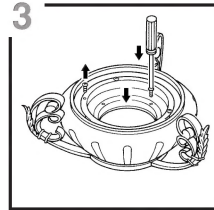


3 Put on the upper glass and secure it with screws. Remove the screws on the top level of the motor housing. Keep them to secure the motor in the next step.

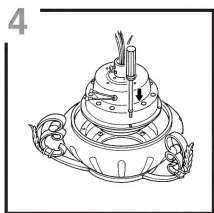


4 Install the motor with the screws.

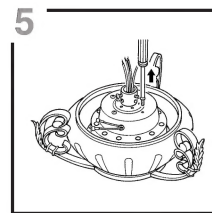


5 Loosen the screws on the top level of the motor but remove only one.

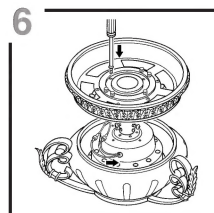


6 Put on the upper housing and secure it with screws.

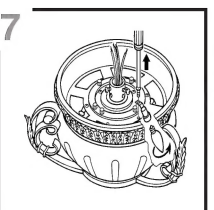




7 Install six C7 15 watt bulbs (included) on the sockets. Install six whole sets on the top housing with screws.

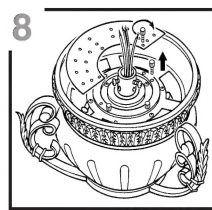

8 Unscrew all the lock screws on the top housing and use them to secure both light covers.

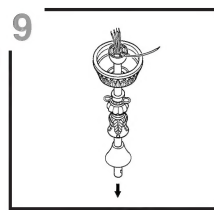

9 Pass the downrod through the cover of collar and join ring.

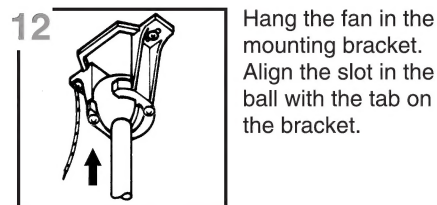
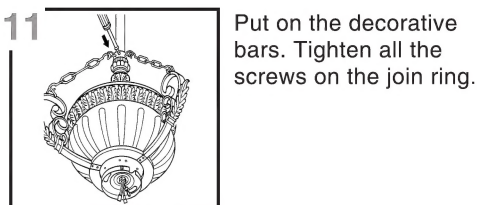
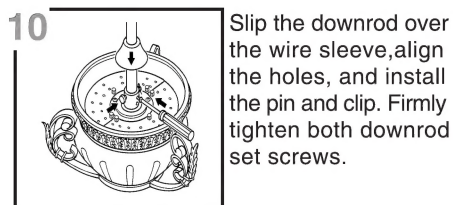


Wiring


⚠ Important: Make sure wiring box is properly grounded or that a ground (green) wire is present.

Note: Black wire is hot power for fan. Blue wire is hot power for light kit. White wire is common for fan and light kit as neutral wires. Green wire is ground.








⚠ Warning: If house wires are different colors than referred to above. Stop immediately. A professional electrician is recommended to determine wiring.

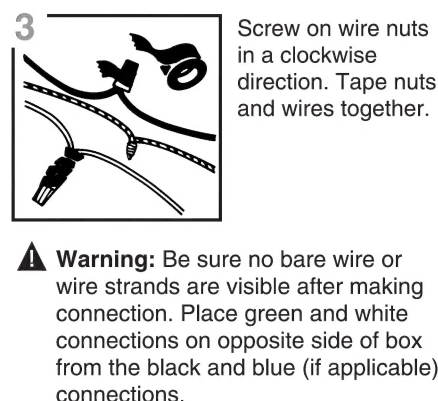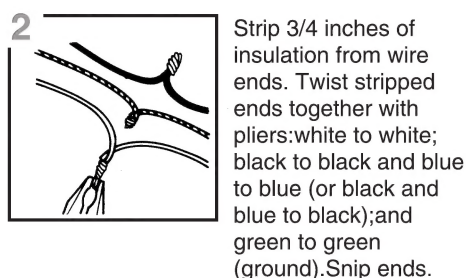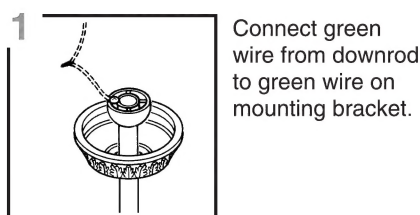

Final Installation

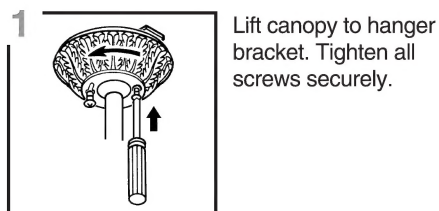


⚠ Warning: For downrod mounting be sure that the tab in the bracket rests in the slot of the ball end.

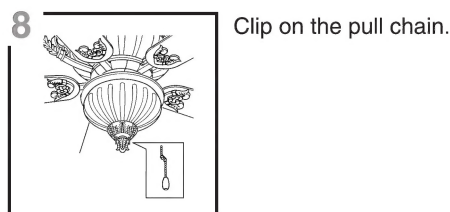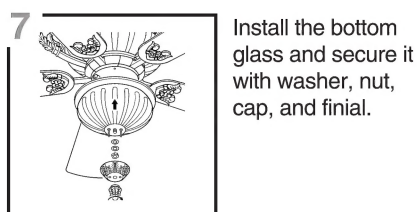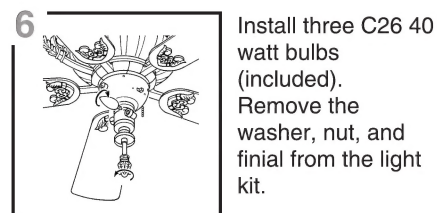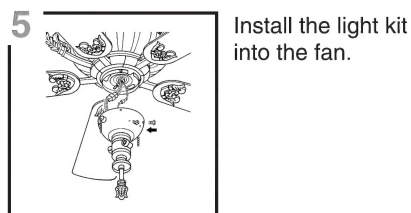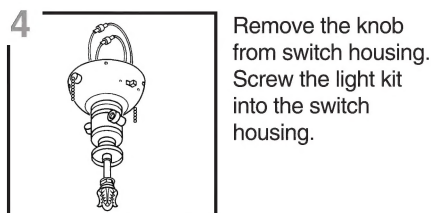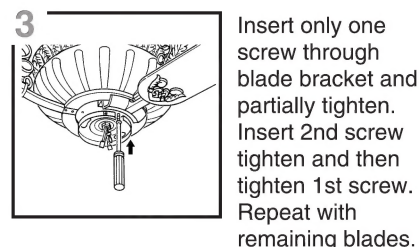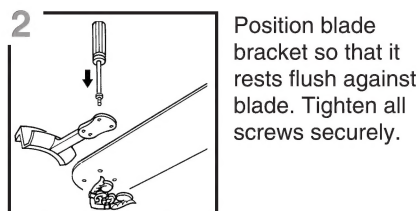

Replacement Parts

Keep this guide handy for ordering replacement parts.

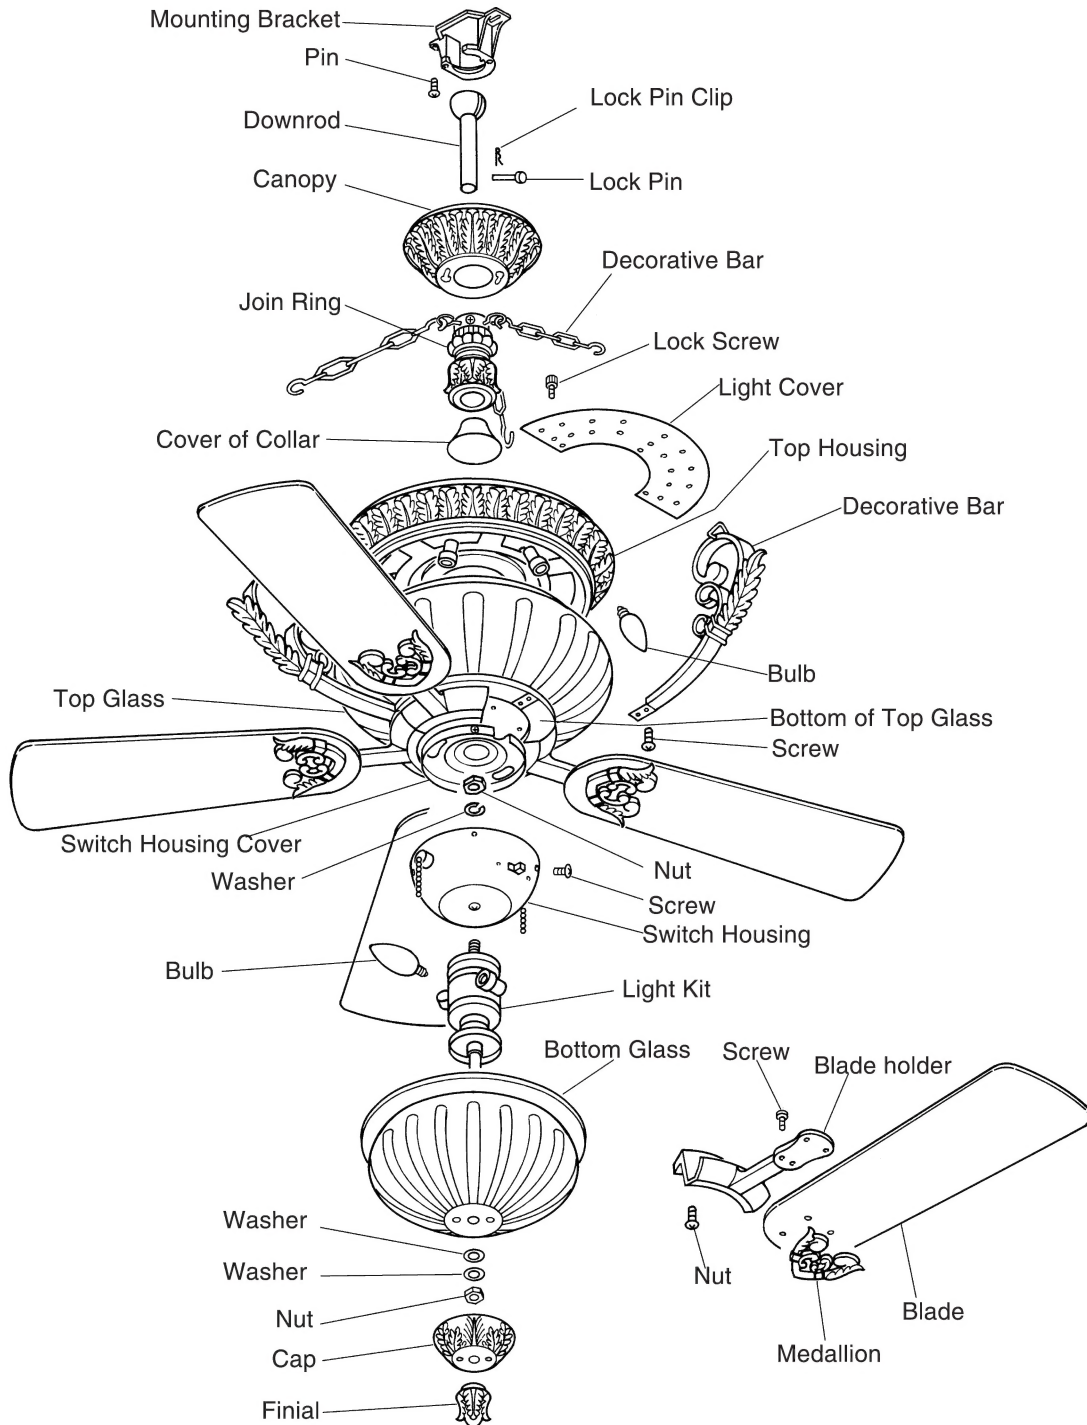

Triarch International, Inc.